

Trademarks

Autel®, MaxiSys®, and MaxiDAS® are trademarks of Autel Intelligent Technology Corp., Ltd., registered in China, the United States and other countries. All other marks are trademarks or registered trademarks of their respective holders.

Copyright Information

No part of this manual may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Autel.

Disclaimer of Warranties and Limitation of Liabilities

All information, specifications and illustrations in this manual are based on the latest information available at the time of printing. Autel reserves the right to make changes at any time without notice.

For Services and Support:

	pro.autel.com / www.autel.com
	1-855-288-3587 (North America) +86 (0755) 8614-7779 (China)
	support@autel.com

For technical assistance in all other markets, please contact your selling agent.

Safety Information

For your own safety and the safety of others, and to prevent damage to the equipment and vehicles upon which it is used, it is important that the safety instructions presented throughout this manual be read and understood by all persons operating or coming into contact with the equipment.

There are various procedures, techniques, tools, and parts for servicing vehicles, as well as in the skill of the individual doing the work. Because of the vast number of test applications and variations in the products that can be tested with this instrument, we cannot possibly anticipate or provide advice or safety messages to cover every situation.

It is the automotive technician's responsibility to be knowledgeable of the system being tested. It is essential to use proper service methods and test procedures. It is important to perform tests in an appropriate and acceptable manner that does not endanger your safety, the safety of others in the work area, the equipment being used, or the vehicle being tested.

Before using the equipment, always refer to and follow the safety messages and applicable test procedures provided by the manufacturer of the vehicle or equipment being tested. Use the equipment only as described in this manual. Read, understand, and follow all safety messages and instructions in this manual.

Safety Messages

Safety messages are provided to help prevent personal injury and equipment damage. All safety messages are introduced by a signal word indicating the hazard level.

⚠ DANGER: Indicates an imminently hazardous situation which, if not avoided, could result in death or serious injury to the operator or to bystanders.

⚠ WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury to the operator or to bystanders.

Safety Instructions

The safety messages herein cover situations Autel is aware of. Autel cannot know, evaluate or advise you as to all of the possible hazards. You must be certain that any condition or service procedure encountered does not jeopardize your personal safety.

 
 
 
⚠ DANGER: When an engine is operating, keep the service area WELL VENTILATED or attach a building exhaust removal system to the engine exhaust system. Engines produce carbon monoxide, an odorless, poisonous gas that causes slower reaction time and can lead to serious personal injury or loss of life.

⚠ WARNINGS:

- Always perform automotive testing in a safe environment.
- Wear safety eye protection that meets ANSI standards.
- Keep clothing, hair, hands, tools, test equipment, etc. away from all moving or hot engine parts.
- Operate the vehicle in a well ventilated work area, for exhaust gases are poisonous.
- Put the transmission in PARK (for automatic transmission) or NEUTRAL (for manual transmission) and make sure the parking brake is engaged.
- Put blocks in front of the drive wheels and never leave the vehicle unattended while testing.
- Be extra cautious when working around the ignition coil, distributor cap, ignition wires and spark plugs. These components create hazardous voltages when the engine is running.
- Keep a fire extinguisher suitable for gasoline, chemical, and electrical fires nearby.
- Do not connect or disconnect any test equipment while the ignition is on or the engine is running.
- Keep the test equipment dry, clean, free from oil, water or grease. Use a mild detergent in a clean cloth to clean the outside of the equipment as necessary.
- Do not drive the vehicle and operate the test equipment at the same time. Any distraction may cause an accident.
- Refer to the service manual for the vehicle being serviced and adhere to all diagnostic procedures and precautions. Failure to do so may result in personal injury or damage to the test equipment.
- To avoid damaging the test equipment or generating false data, make sure the vehicle battery is fully charged and the connection to the vehicle DLC is clean and secure.
- Do not place the test equipment on the distributor of the vehicle. Strong electro-magnetic interference can damage the equipment.

MAXISYS MS909S2

MaxiSys Tablet

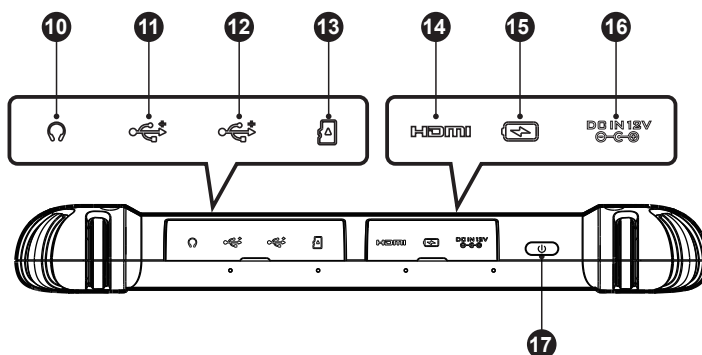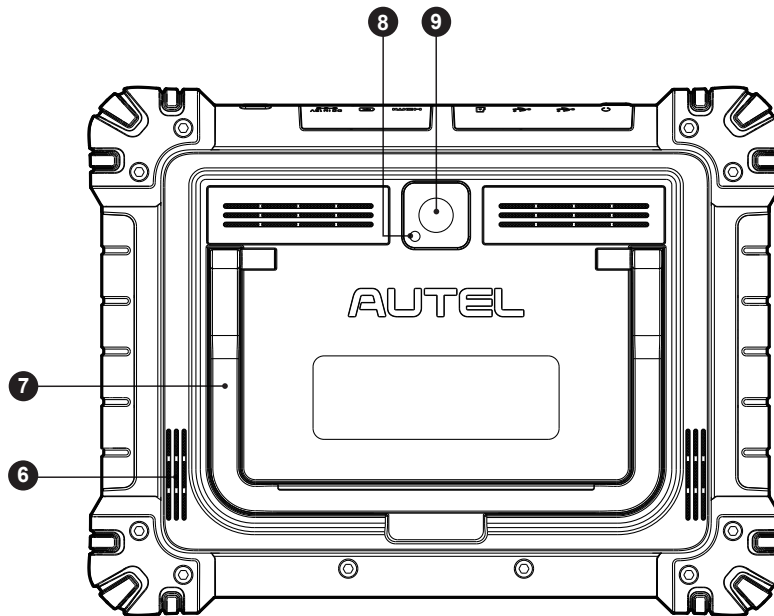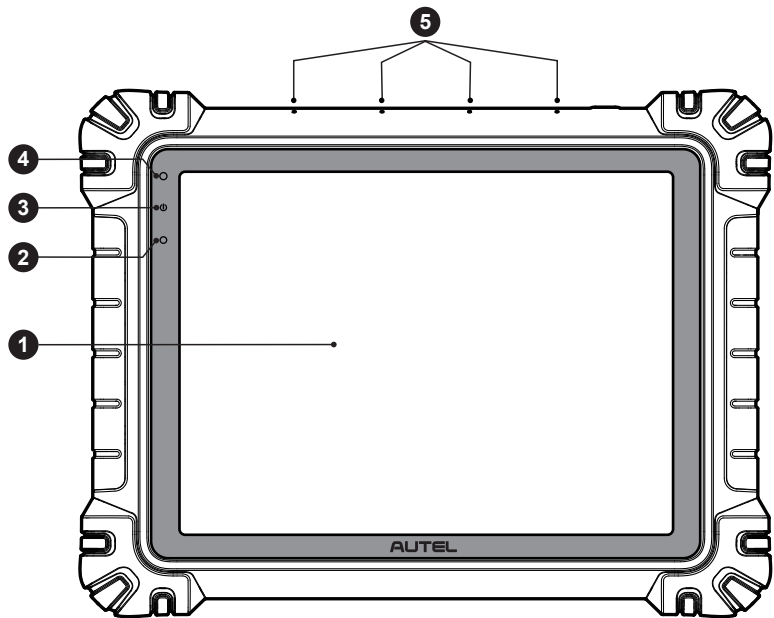

PRODUCT DESCRIPTION

The MaxiSys system has two main components:

 
- MaxiSys Tablet — the central processor and monitor for the system
- MaxiFlash VCI2 — the vehicle communication interface 2

1. 11-inch TFT-LCD Capacitive Touchscreen
2. Ambient Light Sensor — detects ambient brightness
3. Power LED
4. Front Camera
5. Microphone

6. Speaker
7. Collapsible Stand — extends from the back to allow hands-free viewing of the tablet
8. Camera Flash
9. Rear Camera

10. Headphone Jack
11. USB Port
12. USB Port
13. Mini SD Card Slot
14. HDMI (High-Definition Multimedia Interface) Port
15. Type-C Charging Port
16. DC Power Supply Input Port
17. Power/Lock Button — long press to turn on & off the tablet, or short press to lock the screen

MAXISYS MS909S2

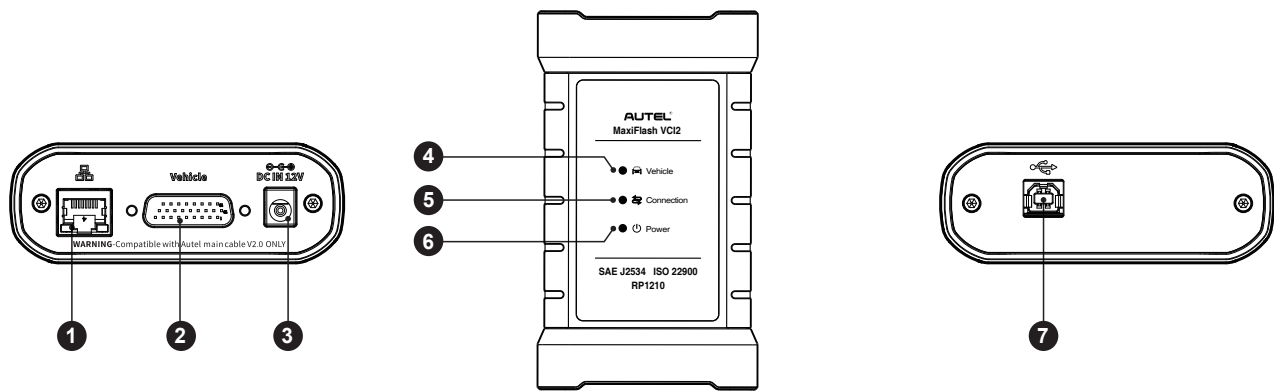

MaxiFlash VCI2

1. Ethernet Port
2. Vehicle Data Connector
3. DC Power Supply Input Port
4. Vehicle LED — flashes green when the device is communicating with the vehicle
5. Connection LED — refer to Table 1-1 Connection LED Description for details
6. Power LED — refer to Table 1-2 Power LED Description for details
7. USB Port

Table 1-1 Connection LED Description

LED	Color	Description
Connection	Green	Lights solid green when connected with the tablet via the USB cable.
	Cyan	Lights solid cyan (blue/green) when connected via Wi-Fi.
	Blue	Lights solid blue when connected via wireless Bluetooth connection.

Table 1-2 Power LED Description

LED	Color	Description
Power	Yellow	Lights yellow automatically at power up when the VCI2 is self-testing.
	Green	Lights solid green when powered on.
	Red	- Lights solid red when system failure occurs. - Flashes red when the VCI2 is upgrading.

GETTING STARTED



 
IMPORTANT: Before operating or maintaining this unit, please read these instructions carefully, paying extra attention to the safety warnings and precautions. Use this unit correctly and with care. Failure to do so may cause damage and/or personal injury and will void the limited product warranty.



WARNING: The MaxiFlash VCI2 is compatible with the Autel main cable V2.0 and USB cable V2 only.


1

Connect the main cable V2.0 to the Vehicle Data Connector on the VCI2 and tighten the thumb screws.

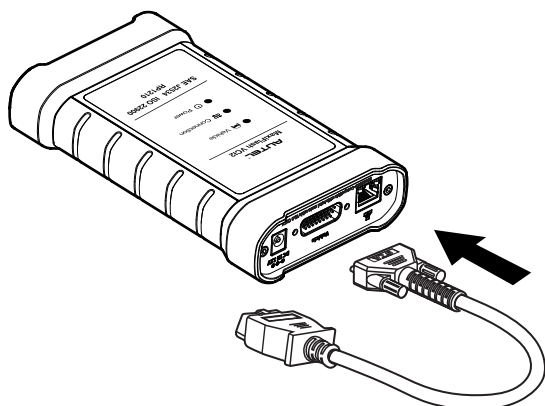


2

 Connect the cable's 16-pin adapter to the vehicle's DLC, which is generally located under the vehicle dashboard.

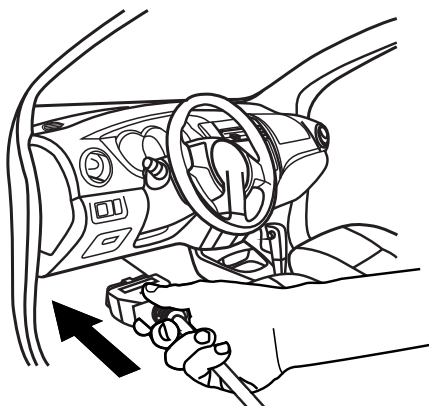


3

 Power up the tablet. Ensure the tablet has a charged battery or is connected to the DC power supply.

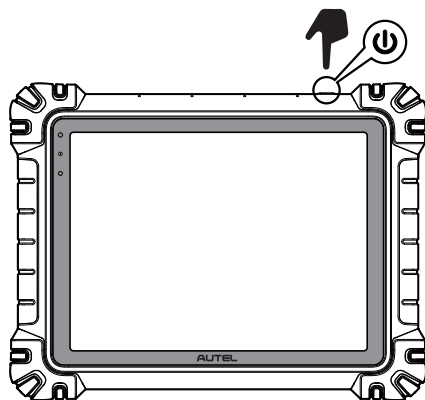


4

 Select one of the three methods shown below (Bluetooth, Wi-Fi or USB cable V2) to establish a connection between the tablet and the VCI2. When programming, you must use the USB cable connection only.

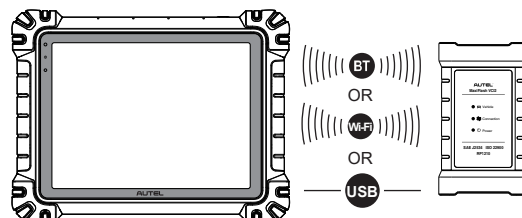

5

 When the VCI2 is properly connected to the vehicle and the tablet, the VCI2 status button at the bottom bar on the screen shows a green badge, indicating the system is ready to start vehicle diagnosis.

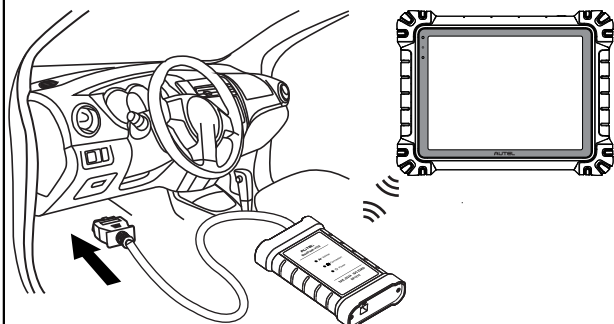

Thank you for purchasing the Autel MaxiSys MS909S2. Autel manufactures its tools to the highest standards. If properly maintained and used according to the instructions, the MaxiSys system will provide years of trouble-free use.